

Baptismal Heater

The first step is to take the heater out to your pool, immerse in the water, and the plug it in. Make sure your outlet is protected from rain and is capable of handling 15 amps. Keep in mind the heater won't turn on unless your temperature is 79 °F or lower, it may take a few moments. Follow this same procedure with each heater.


Start the heating process 24 hours before the service.

CAUTION: The heater must be unplugged and removed during the service.


If the GFCI green light is not on

- 1) No power, check your home fuse panel circuit breakers.
- 2) The GFCI plug or outlet may have gotten wet.
- 3) Water has gotten into the heating element, the heater has to be replaced.
Check your warranty period.

Do Not Overload your breakers
The 1KW heater is rated at 15 amps, one heater per 120v.

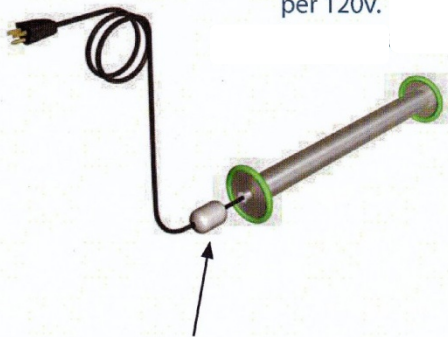

The temperature sensor must be submerged in the water.




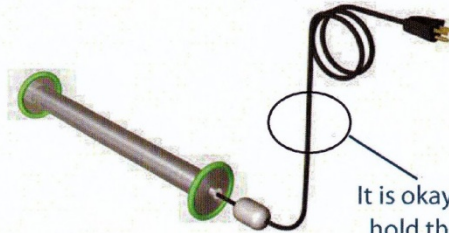


It is okay to temporarily hold the **HOT** heater from the cable.


During operation, the heater must lay flat on bottom of baptismal/pool.

Energy Efficient


Proper Installation of heater with built in thermostat

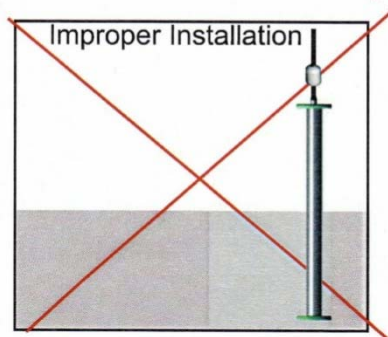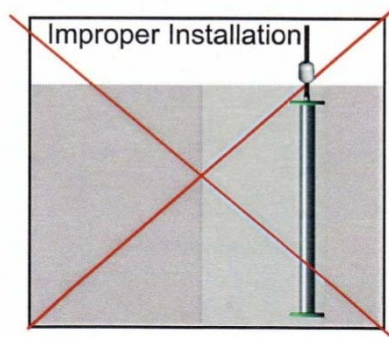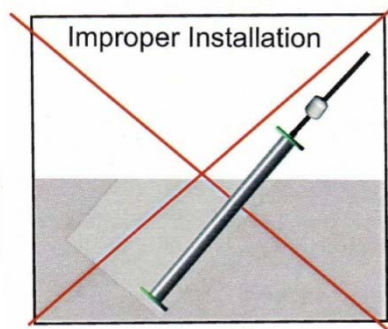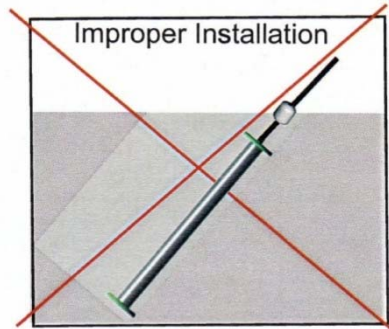

Correct Installation

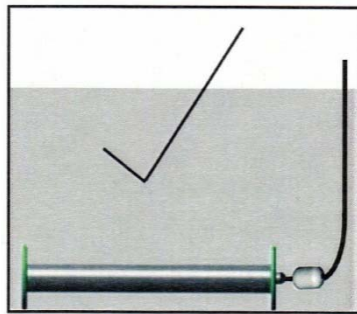

The HEATER and THERMOSTAT must lay horizontal on the bottom, and must be submerged in water at all times.

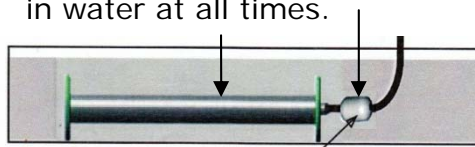



WARRANTY INFORMATION

ChurchRite warrants to purchaser that its products shall be free of defects in workmanship or materials for ONE YEAR from the original purchase date; however ChurchRite's sole obligation under this warranty shall consist of repairing or replacing, free of charge, (F.O.B. its factory), any product received prepaid at its factory within ONE YEAR from the date of purchase and determined by ChurchRite upon inspection to be defective. The misuse, misapplication or failure to follow operational directions of any ChurchRite product, or the use of any heater without the presence of adequate water in the baptistery, will void the warranty.

No product shall be returned without the express written approval of ChurchRite.

See our website at www.ChurchRite.com for return information.

NO OTHER WARRANTY, EXPRESS OR IMPLIED, AS TO DESCRIPTION, QUALITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR ANY OTHER MATTER IS GIVEN BY CHURCHRITE IN CONNECTION HERewith. THE SELECTION, APPLICATION, SUITABILITY FOR CORROSION RESISTANCE OR USE FOR ANY PURPOSE, ARE PURCHASER'S SOLE RESPONSIBILITY. UNDER NO CIRCUMSTANCES SHALL CHURCHRITE BE LIABLE FOR LOSS OF USE, PROFITS OR ANY OTHER DIRECT OR INDIRECT COSTS, EXPENSES, LOSSES OR DAMAGES ARISING OUT OF DEFECTS IN OR FAILURE OF THE PRODUCT OR ANY PART THEREOF. ALWAYS REMOVE ALL ELECTRICAL COMPONENTS PRIOR TO TOUCHING THE WATER.